



INSTALLATION INSTRUCTIONS 2 1/16" AIR/FUEL RATIO MONITOR

Installation

1. Disconnect the negative (-) battery cable
2. Gauge can be mounted in any 2 1/16" diameter hole
3. Wire gauge as shown

Red Wire: Connect to a switched 12V positive source that is turned on and off with the ignition switch

Black Wire: Connect to a good engine ground

Violet Wire: Connect to oxygen sensor signal wire. Locate wire on vehicle harness and not oxygen sensor harness

White Wire: Connect to 12V Dash Lighting

