



INSTALLATION INSTRUCTIONS 2 1/16" OIL PRESSURE 0-100 PSI

Installation

1. Disconnect the negative (-) battery cable and reconnect when completed.
2. Wire gauge with diagram shown below. Green wire goes to oil pressure sender unit. Connect oil pressure sender unit via oil filter block sandwich or other means of plumbing. Use teflon tape or sealant on threads to prevent from oil leakage.

Red Wire: Connect to a switched 12V positive source that is turned on and off with the ignition switch

Black Wire: Connect to a good engine ground

White Wire: Connect to 12V Dash Lighting

Green Wire: Connect to Oil Pressure sender unit (WARNING: Do not touch this wire to positive source)

