



INSTALLATION INSTRUCTIONS 2 1/16" WATER TEMPERATURE

Installation

1. Disconnect the negative (-) battery cable and reconnect when completed.
2. Wire gauge with diagram shown below. Green wire goes to water temperature sensor unit. Connect water temperature sensor unit via water temperature adapter or other method so that the temperature sensor touches the vehicle coolant in the upper radiator hose. Use teflon tape or sealant on threads to prevent from coolant leakage.

Red Wire: Connect to a switched 12V positive source that is turned on and off with the ignition switch

Black Wire: Connect to a good engine ground

White Wire: Connect to 12V Dash Lighting

Green Wire: Connect to Oil Temperature Sensor unit (WARNING: Do not touch this wire to positive source)

