




# INSTALLATION INSTRUCTIONS 2 1/16" VACUUM/BOOST GAUGE

## Installation

1. Follow diagram below. Connect the boost tube. Run tube through firewall and connect to boost tee. Remember to protect tube with rubber grommet (not included) or seal at firewall opening. Locate Vacuum/Boost line protruding from intake manifold, then cut and connect the boost tee.
2. If no vacuum/boost line can be found, use supplied additional adapter fitting to drill/tap hole for pressure source.

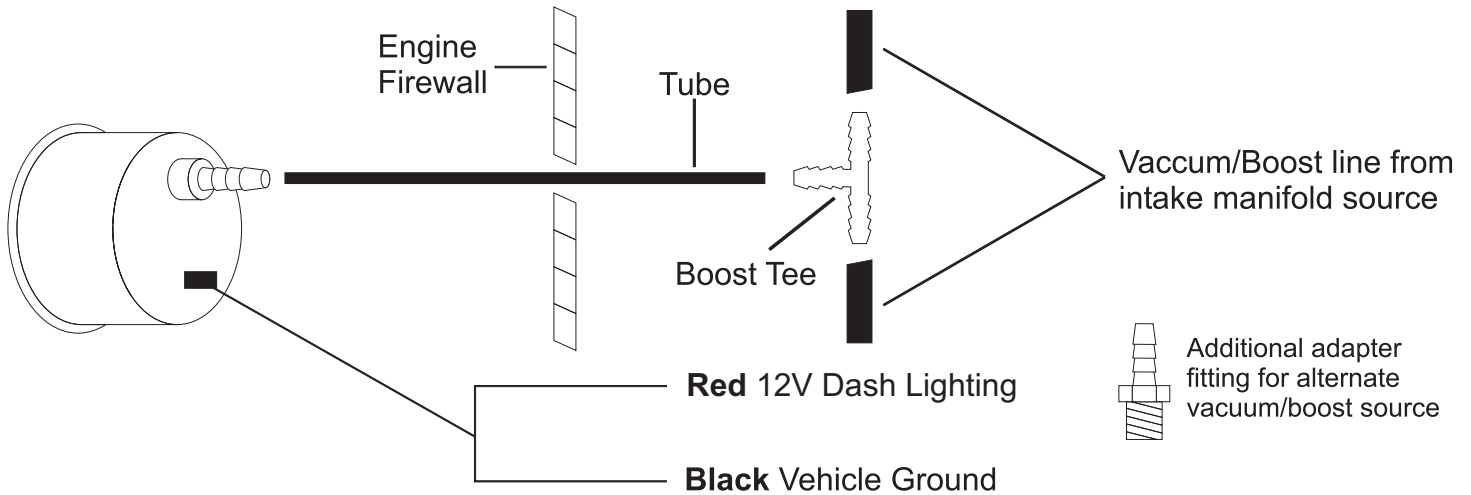

# INSTALLATION INSTRUCTIONS 2 1/16" VACUUM/BOOST GAUGE

## Installation

1. Follow diagram below. Connect the boost tube. Run tube through firewall and connect to boost tee. Remember to protect tube with rubber grommet (not included) or seal at firewall opening. Locate Vacuum/Boost line protruding from intake manifold, then cut and connect the boost tee.
2. If no vacuum/boost line can be found, use supplied additional adapter fitting to drill/tap hole for pressure source.

